

RTL/RTLTL return temperature limiter

Conversion to thermoelectric actuator (assembly set part no.: RT461)

1/1

Conversion



1 Assembly set, consisting of thermoelectric actuator, thermostat attachment (including expanding element sensor), brass sleeve



2 Fold open valve body forward and remove protective cap



3 Insert brass sleeve



4 Unscrew the thermostat attachment (including expanding element sensor)




5 Screw on the thermoelectric actuator



6 Fold back the valve body

Setting the thermostat attachment

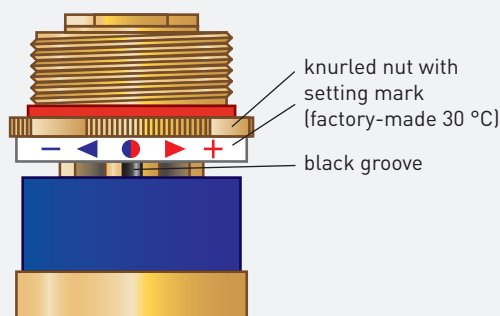

In the factory, ● lies above the black groove (corresponds to a return temperature of 30 °C). The return temperature can be adjusted by turning the knurled nut (20–40 °C).

